

# iSeed®

## Settings for Moore Unidrill / Accord DE/S



### Calibrations for Moore Unidrill, Accord DE/S

BARE SEED	
MACHINE SHAFT SETTING	KG/HA
28	35,0
30	41,0
32	45,0
34	47,5
36	51,0


iSEED®	
MACHINE SHAFT SETTING	KG/HA
28	22,5
30	28,5
32	34,0
34	36,5
36	38,5

### Guidelines & remarks

- Long distant driving between loading hopper and start of sowing can make seed compact, and thus lock the agitator. Therefore, load the hopper after the road travel is completed.
- Suggested to take max 6 bags at the time.
- At standard grass seed rates of 30-40 kg/ha: standard wheel.
- Standard agitator and procedures.



iSEED® / BARE SEED	
MACHINE SHAFT SETTING	RATIO
28	0,64
30	0,70
32	0,76
34	0,77
36	0,75

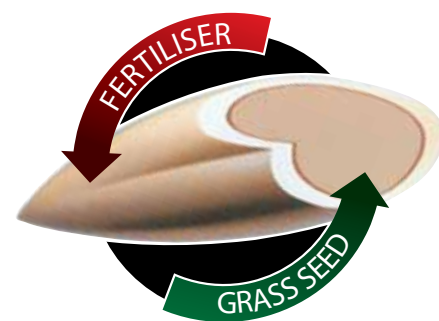

#### DLF-TRIFOLIUM

Ny Oestergade 9 - DK 4000 Roskilde  
Tel. +45 46 33 03 00 - Fax +45 46 32 08 30  
www.dlf.com - dlf@dlf.com

The above calibration is an example. Always make your own calibrations before sowing!